




SUNROOF | SUN CANOPY

- MAURITIUS PREMIUM 260 [900155] LIGHT GREY/LIGHT GREY, 260 x 300 cm
- MAURITIUS PREMIUM 300 [900156] LIGHT GREY/LIGHT GREY, 300 x 300 cm
- MAURITIUS PREMIUM 260 [900157] ANTHRACITE/ANTHRACITE, 260 x 300 cm
- MAURITIUS PREMIUM 300 [900158] ANTHRACITE/ANTHRACITE, 300 x 300 cm

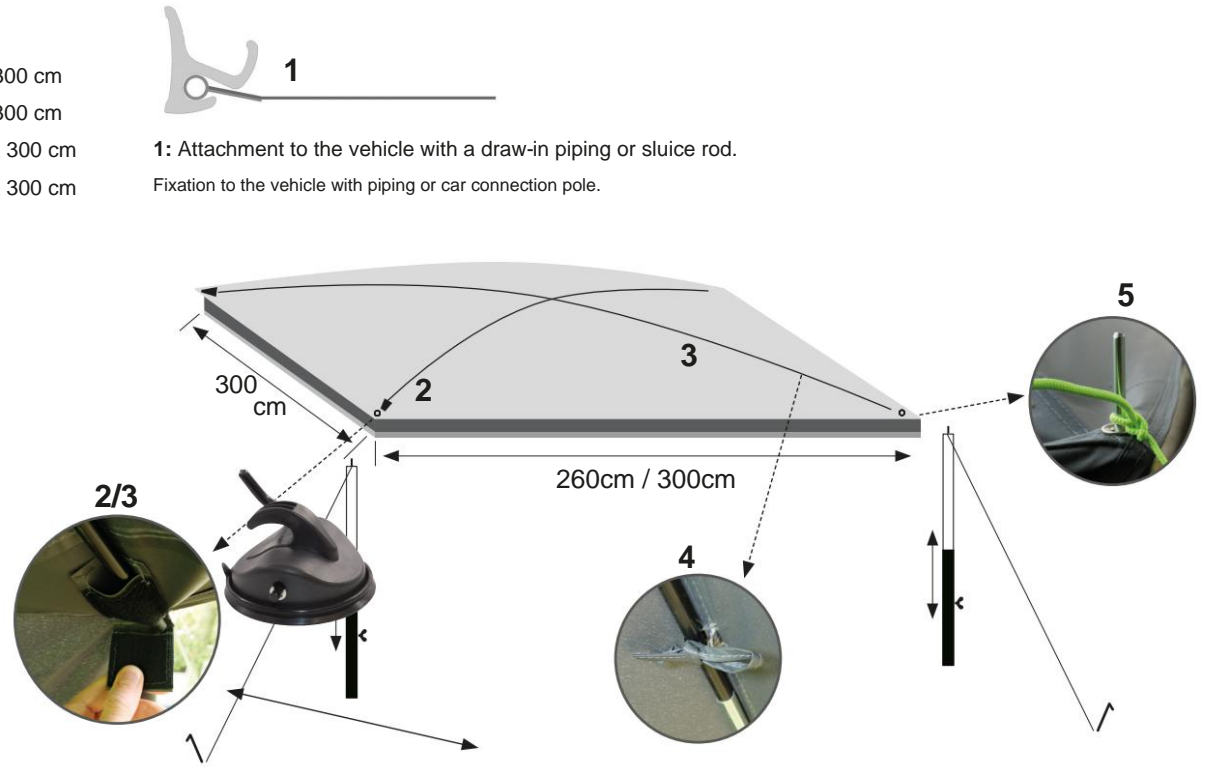

1: Attachment to the vehicle with a draw-in piping or sluice rod.
 Fixation to the vehicle with piping or car connection pole.

2/3: Insert fiberglass rods into the pocket on the vehicle and then on the opposite side.
 Insert the fiberglass bar into the pocket on the vehicle and then on the opposite side.

4: Attach fiberglass poles to sun canopy with sewn ties.
 Fasten fiberglass bars to the sun canopy with sewn-on straps.

5: Insert the support poles into the eyelets, set the desired height and tension.
 Insert the lifting bars into the eyelets, set the desired height and fix them down.

The side walls can be rolled up, straight down or braced to the side.
 The side panels can be rolled up, be fixed straight down or to the side.



300D Oxford polyester	2,000mm	seams sealed	Piping Ø 5 + 8 mm
UV protection 50+	fiberglass	9/10 kg	

The sun sail or the side wall may only be cleaned with special cleaning agents!

The awning or the side wall must only be cleaned with special cleaners!

SCOPE OF DELIVERY | SCOPE OF DELIVERY

- 1 sun sail, 2 erection poles, 1 sluice rod,
- 2 fiberglass poles, pegs and guy ropes, pannier
- 1 sun sail, 2 aluminum lifting bars, 1 car connection pole, 2 fiberglass bars, pegs and tiedown ropes, carry bag